

# Aristel Networks

## Euro DECT AN208

### Quick Start Guide



### 2 Line / 9 Handset Telephone System

### Warning

This equipment will be inoperable when mains power fails.

**Aristel Networks** Pty Ltd  
Unit 1, 25 Howleys Road  
Notting Hill, Victoria. 3168  
Telephone: 03 8542 2300  
Facsimile: 03 9544 3299

## 1. Wiring ~ Installation

Install all Handset batteries in the Handsets and connect the power packs to the charging cradles

Place Handsets in charging cradles and charge batteries for 15 hours (1st charge only)

Connect the power pack to the base

Connect the exchange line(s) to the socket(s) **L1** and **L2** on the rear of the base.


Connect fax or standard handset to **AUX** if required.

**DO NOT** connect exchange lines into the **AUX** socket, as this will cause the equipment to operate incorrectly.

## 2. Register a Handset (if required)

**The two handsets that come with the Base Unit are already registered.**

On an already registered Handset press **down arrow**  until **BS setting** appears

Press **INT** (Enter) 

Enter the Master PIN (default is **1590**)


Press **INT** 

Press **down arrow**  until **New HS** appears


Enter Sub PIN (default is **1590**)

Press **INT** 

Enter the Handset number to registered

Press **INT**  You now have two minutes to complete the following procedure

**Note: Alternately, you may enable handset registration by pressing and holding the “Handset Registration” button down for 3 seconds. The button is located on the front of the Base Unit. It can be accessed by removing the right hand side foot rest. Base Unit “PIN” is required using this method. You can now register the new handset**

On the new, unregistered handset press **down arrow**  until **Register** appears

Select the correct base number (if only one base is installed it is base 1)

Handset will search for the base put in registration mode by the above steps

Handset will respond with a number (e.g.:003aa-001f0h)

Press **INT** 

Enter PIN (default is **1590**)

Press **INT** 



System responds in approx. 5 Secs and Handset returns to idle state with the number displayed on the LCD

## 3. External calls

**Answer a call**

Press the **Talk**  button.

**Make a call**

Press the **Talk**  button and dial the required number **OR** enter the number to be dialled and press the **Talk**  button

## 4. Intercom calls

**Answer a call**


Press the **Talk**  button.

**Make a call**

Press the **INT**  button.

## 5. Deregister a Handset


**NOTE! You cannot use the handset to be deregistered in this procedure**

On another registered Handset press **down arrow**  until **BS setting** appears

Press **INT** 

Enter the Master PIN (default is 1590)

Press **INT** 

Press **down arrow**  until **Remove HS** appears

Enter the Handset number to deregistered

Press **INT** 

Handset will be deregistered in approx. 5 Secs  
*Not sub* will be displayed